

SolSuno

Watches

Guarantee/Instruction

GUARANTEE

The SolSuno Timepiece has been produced using the latest technical method.

Each item is individually tested and has to go through strict quality controls.

Therefore we guarantee this item for a period of:

12 MONTHS from date of purchase.

This guarantee is offered in order to make our technical facilities available. It is in addition to the statutory rights of the purchaser and will not affect them. This guarantee is only valid if full particulars are filled in by the retailer at time of purchase.

This guarantee excludes batteries where applicable which are not included in the purchase prices, but are provided free of charge for demonstration purposes.

This guarantee does not include bracelets/straps.

This guarantee does not cover damage caused by misuse or neglect.

This guarantee shall be void if the product has been taken apart or repaired by anyone but ourselves in our own service department.

SolSuno Limited will carry out repairs that are not covered by the guarantee at a charge.

INSTRUCTIONS FOR RETURN

Please note carefully:

Should your timepiece require attention, pack it well and send with the guarantee form and £6.00 cheque paid to "SolSuno Limited" to cover packing, handling, insurance and return postage.

Please send to:

SolSuno Limited

Units R S T U

Burnham Trading Estate

Lawson Road

Dartford

Kent

DA1 5BH

UK

* If replacement batteries are required, please send an additional £3.00 to cover cost of supplying and fitting batteries.

**BATTERY REPLACEMENT SHOULD ONLY BE UNDERTAKEN
BY A WATCH SPECIALIST.**

WELCOME TO SOLSUNO TIME

Thank you for choosing the SolSuno watch.

This is a precision electronic design, which uses Colours and Lights to indicate Time.

This unique Timepiece will help you read Time in a very enjoyable way.

Rotations of Lights are represented in this Timepiece so you can monitor the SUN inside your Watch every Hour, Minute & Second.

Each Hour, Minute & Second has its own Light. Exactly like our own SUN, every Hour, Minute & Second is uniquely represented by the relative position of Light.

The SolSuno is a wonderful symbiosis of ancient science & modern technology.

IMPORTANT NOTICE

Your watch will initially be in **Stop Mode** drawing very little current from the Battery.

If you receive your watch in **Stop Mode**, you will have to wake your watch to **Active Mode** to start using it.

To do this, please complete the following:

WAKE UP FROM STOP MODE:

Simply press and hold **Switch 1** until you hear a beep and see the lights.

Your watch now is ready to use!

TELLING TIME

Note: When reading Time first look & read the **Hour**, **Minute**, & then the **Second**.


- Press **Switch 1** once **Time** will appear from one Hour, one Minute, one Second (*Image B*).
- Press **Switch 1** twice **Day** of **week** will appear from one Hour (*Image C*).
- Press **Switch 1** three times **Year**, **Month** & **Day** of the Month will appear from one Hour, one Minute, one Second (*Image D*).
- The display will switch **OFF** automatically after **15 Seconds** to save Battery power.
- You can switch the display **OFF** earlier by pressing **Switch 2** to let your Battery LAST LONGER.
- If you press **25** times a day the Battery will last you approx 24 **Months**.
- If you press **25** times a day and you switch it **OFF** after 5 or 10 **seconds** each time, the Battery will last you much longer.

As you become familiar with the **SolSuno** way of telling TIME, this life span will undoubtedly increase.

Flickering Mode/Battery Life:

24 Hours a day **ON**: (Appox. 8 Months)

12 Hours a day **ON**: (Appox. 14 Months) and so on.....

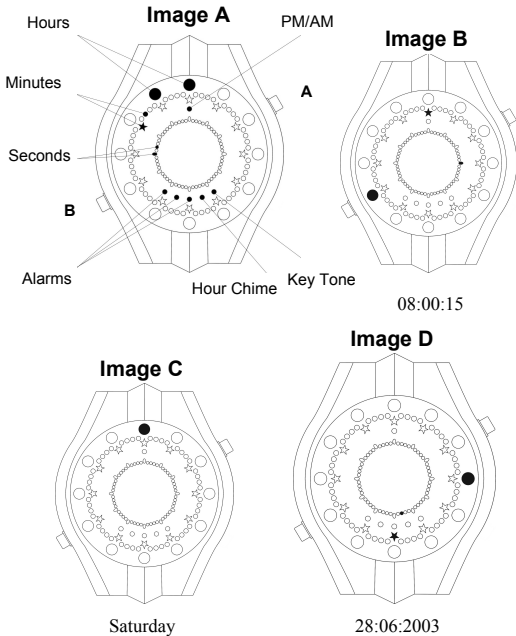

FEATURES: 18

- CR2032 Lithium Battery 210mAh
- Very low power consumption
- Sleep Mode
- Stop Mode
- Active Mode
- Flickering Mode
- Seconds, Minutes & Hours
- Week Day, Day, Month & Year
- 3 Alarms, Sound & Lights
- Buzzer built in
- Auto power **OFF** (after 15 Seconds)
- Manual power **OFF**
- 138 coloured **LED** lights
- Key tone operation
- Hourly Chime
- **AM/PM** indicator
- Alarm activated display
- Green, Yellow & Red colours supported

MODES: 4

Sleep Mode = Display **OFF**

Stop Mode = Display **OFF**

Active Mode = Display **ON**

Flickering Mode = Display always **ON**

Note: Not all SolSuno Models include the Flickering Mode.

Briefly and Simultaneously Press **Switch 2** and **Switch 1**.

If your watch has this Feature, Flickering Mode is **ON**.

Repeat the same procedure to turn the Flickering Mode **OFF**

SCREENS: 8

Screen 1 = Switch 2-1, Flickering Mode (**ON/OFF**)

Screen 1 = (1 Press) Hour, Minute & Second

Screen 2 = (2 Presses) Day of the week

Screen 2 = Alarms, Hour Chime & Key tone

Screen 3 = (3 Presses) Year, Month & Day of Month

Screen 4 = (4 presses) Alarm 1

Screen 5 = (5 presses) Alarm 2

Screen 6 = (6 presses) Alarm 3

Screen 7 = (Switch 1) Press & Hold (Hour Chime)

Screen 8 = (Switch 1) Press & Hold (Key Tone)

CODES: 11

Hours = Red

Minutes = Red

Seconds = Yellow, Green & Red etc.

Hours 1 – 12 = Years (Hour 1 = Year 2001)

Hour 12 – 6 = Days of week (Hour 12 = Saturday)

Minutes 5, 10, 15 etc = Months (Minute 5 = January)

Seconds 1 – 31 = Days of Month (Second 1 = 1st.)

Flashing light = **OFF**

Stable light = **ON**

AM = light **OFF**

PM = light **ON**

SWITCHES: 2

Switch 1 (A): Press to access Screens **1** to **8**

Switch 2 (B): Press to shut **OFF** display

Switch 1 & Switch 2: Press & Hold for Time Setting

IMPORTANT:

NOTE: For all settings watch should be in sleep Mode.
After 15 Seconds in Active Mode (lights ON) Displays will be deactivated.

1/ TIME & DATE SETTINGS:

Switch 1 & Switch 2: Press & hold simultaneously until Seconds light flashes.

Switch 1: Press & hold to bring the Seconds to 01 position

Switch 2: Press once to set the Second

Minute's light flashes

Switch 1: Press repeatedly to advance the Minute

Switch 2: Press once to set the desired Minute

Hour's Light flashes

Switch 1: Press repeatedly to advance the Hours (**AM** or **PM**)

Switch 2: Press once to set the desired Hour

Days of the week light flashes (Hours 12 – 6), Hour 12 = Saturday

Press **Switch 1** repeatedly to advance the Day

Press **Switch 2** once to set the desired Day

Year's light flashes (Each Hour = 1 Year), Hour 12 = Year 2000

Press **Switch 1** repeatedly to advance the Year

Press **Switch 2** once to set the desired Year

Month's light flashes (Fifth of each Minute), Star 2 = February

Press **Switch 1** repeatedly to advance the Month

Press **Switch 2** once to set the desired Month

Days of the Month light flashes (Second 01 to Second 31)

Press **Switch 1** repeatedly to advance the Day

Press **Switch 2** to set the desired Day

2/ ALARM SETTINGS:

Setting Alarm 1:

Switch 1: Press & hold until **Alarm 1** light flashes then release it

Switch 2: Press once to activate the Minute

Switch 1: Press repeatedly to set the desired Minute

Switch 2: Press once to activate the Hour

Switch 1: Press repeatedly to set the desired Hour (**AM** or **PM**)

Switch 2: Press to set **Alarm 1 (ON)**

Setting Alarm 2:

Switch 1: Press & hold until **Alarm 1** light flashes then release it

Switch 1: Press once to activate **Alarm 2**

Switch 2: Press once to activate the Minute

Switch 1: Press repeatedly to set the desired Minute

Switch 2: Press to activate the Hour

Switch 1: Press repeatedly to set the desired Hour (**AM** or **PM**)

Switch 2: Press to set **Alarm 2 (ON)**

Setting Alarm 3:

Switch 1: Press & hold until **Alarm 1** light flashes then release it

Switch 1: Press once to activate **Alarm 2**

Switch 1: Press once again to activate **Alarm 3**

Switch 2: Press to activate the Minute

Switch 1: Press repeatedly to set the desired Minute

Switch 2: Press to activate the Hour

Switch 1: Press repeatedly to set the desired Hour (**AM** or **PM**)

Switch 2: Press to set **Alarm 3 (ON)**

Checking Alarms ON/OFF:

Alarms **ON** if in screen 2 (2 presses) **Alarms** lights are **ON**

Alarms **OFF** if in screen 2 (2 presses) **Alarms** lights are **OFF**

Checking Alarms Setting:

Switch 1: Press 4 times to see **Alarm 1** setting (screen 4)

Switch 1: Press once again to see **Alarm 2** setting (screen 5)

Switch 1: Press once again to see **Alarm 3** setting (screen 6)

Switch 1: Press once again to leave the screen.

Switching Alarms OFF:

Switch 1: Press 4 times to go to **Alarm 1** (screen 4)

Switch 2: Press once to switch **Alarm 1 OFF**

Switch 1: Press once to go to **Alarm 2** (screen 5)

Switch 2: Press once to switch **Alarm 2 OFF**

Switch 1: Press once to go to **Alarm 3** (screen 6)

Switch 2: Press once to switch **Alarm 3 OFF**

Switch 1: Press once to leave the screen.

Note:

When **Alarms** are **OFF** Screen 4/5/6 are unavailable

3/ HOUR CHIME SETTING

Turn Hour Chime ON/OFF

Switch 1: Press & hold until Alarm 1 flashes then release it

Switch 1: Press once again to go to Alarm 2

Switch 1: Press once again to go to Alarm 3

Switch 1: Press once again to go to **Hour Chime** (Screen 7)

Switch 2: Press repeatedly to set **Hour Chime (ON or OFF)**

Switch 1: Press 2 times to leave the screen.

Checking Hour Chime:

Switch 1: Press once to go to Time Reading Screen

Switch 1: Press once again to see if **Hour Chime** light is **(ON)**

Switch 2: Press once to leave the screen.

4/ KEY TONE SETTING:

Turn Key Tone ON/OFF

Switch 1: Press & hold until Alarm 1 flashes

Switch 1: Press once again to go to Alarm 2

Switch 1: Press once again to go to Alarm 3

Switch 1: Press once again to go to Hour Chime

Switch 1: Press once again to go to **Key Tone**

Switch 2: Press repeatedly to set **Key Tone (ON or OFF)**

Switch 1: Press once to leave the screen.

Checking Key Tone:

Switch 1: Press once to go to Time Reading Screen

Switch 1: Press again to check Key Tone (**ON or OFF**)

Switch 2: Press once again to leave the screen.

5/ ENTER STOP MODE WHEN IN SLEEP MODE:

Switch 1 & 2: Press & hold simultaneously until you see the lights

Switch 2: Press & hold until you hear a long beep

Your Watch is now in stop mode

6/ WAKE UP FROM STOP MODE:

Switch 1: Press & hold until you hear a long beep & see the Lights

Your Watch is now ready to use!

BATTERY REPLACEMENT

3 VOLT CR2032

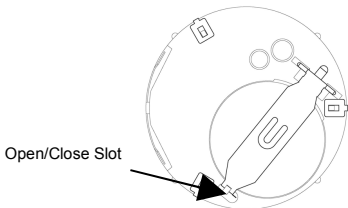


IMAGE 1

SPECIFICATIONS:

Accuracy: ± 30 seconds per month on average (When worn at normal temperatures of $+ 5^{\circ}\text{C}$ to $+ 35^{\circ}\text{C}$).

HANDLING OF BATTERIES:

Keep batteries out of reach from small children. In the event of a battery being mistakenly swallowed, consult a doctor immediately.

BATTERY REPLACEMENT:

Do not leave a dead battery in the watch for a long time. It may cause a malfunction due to leakage and be sure to replace it with a new correct one, **Image 1**.

INSTALLATION (VERY IMPORTANT):

Your battery should be properly installed.

When replacing a new battery always make sure the **Metal Clip**, which holds the battery in position, is firmly fitted for contact activation. **Image 1**.

To confirm this you will see all LED lights scanning around the display.

If after installing a new battery you did not see the scanning display, this means that the battery has not been installed properly, please repeat the installation.

We recommend for the first time use a jeweller to change the battery,

For more info on installing the battery please visit our website:

www.solsunotime.com

www.solsuno.com

TEMPERATURE:

The function of the watch may decrease or stop if the watch is left for an extended period of time at temperatures outside the normal range of + 5°C to + 35°C. Fluid may leak from the battery resulting in a considerable shortening of battery life.

STATIC ELECTRICITY:

The integrated circuits used in the watch are sensitive to static electricity.

If exposed to intense static electricity, the watch display may become inaccurate.

STRONG SHOCKS:

Avoid dropping the watch or subjecting to other strong impacts/intense vibrations.

CHEMICALS, CORROSIVE GASES AND MERCURY:

Avoid contact with your watch with chemicals such as gasoline, nail polish remover, cresol & adhesives etc. as they may discolour, dissolve or crack the materials. Contact with mercury such as that used in thermometers may also cause discolouration of the band and case.

WATER RESISTANCE:

Your watch is manufactured to withstand up to:
5 ATM (50M)

GUARANTEE FORM

Particulars below must be completed and **Stamped** by retailer at time of purchase.

Purchase from:

(Name and address of supplier)

Date of Purchase:

Customer's Name:

(Block letters)

Customer's Address:

Customer's Telephone No.:

Nature of fault (if any):

Model No.:

Please keep guarantee and send to us with timepiece Should same require attention?

Guarantee